




## Measuring and Trimming Dacron Lines On a Atair Canopy

- 1) Remove the lines from connector links and stick them on the peg.  
Pull each line to 70N (15lbs).
- 2) Measure the A, B, C and D lines from the outboard line top of the loop  
( riser side ) to the top of loop ( canopy side ).




- 3) Measure the steering lines ( SL ) from the shallow brake setting loop to the top of the  
Upper Steering Line.

While measuring pull each line to 70N (15lbs).

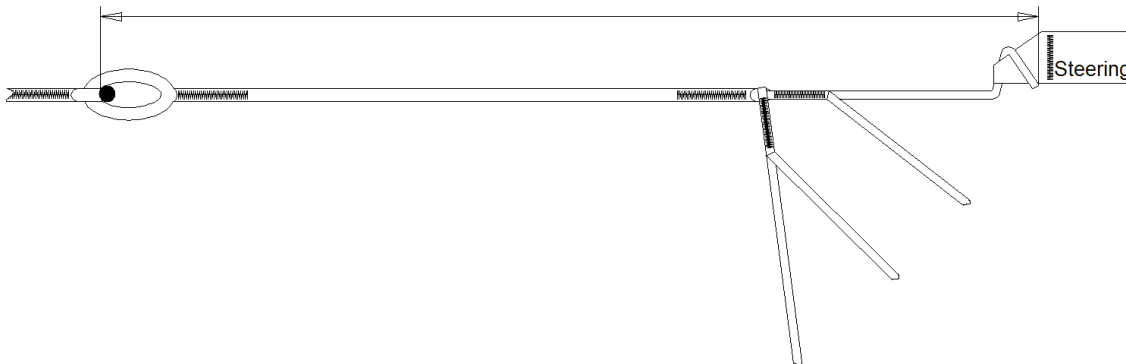

4) Trim B, C, D and Brake Lines according to OSP Line Trim

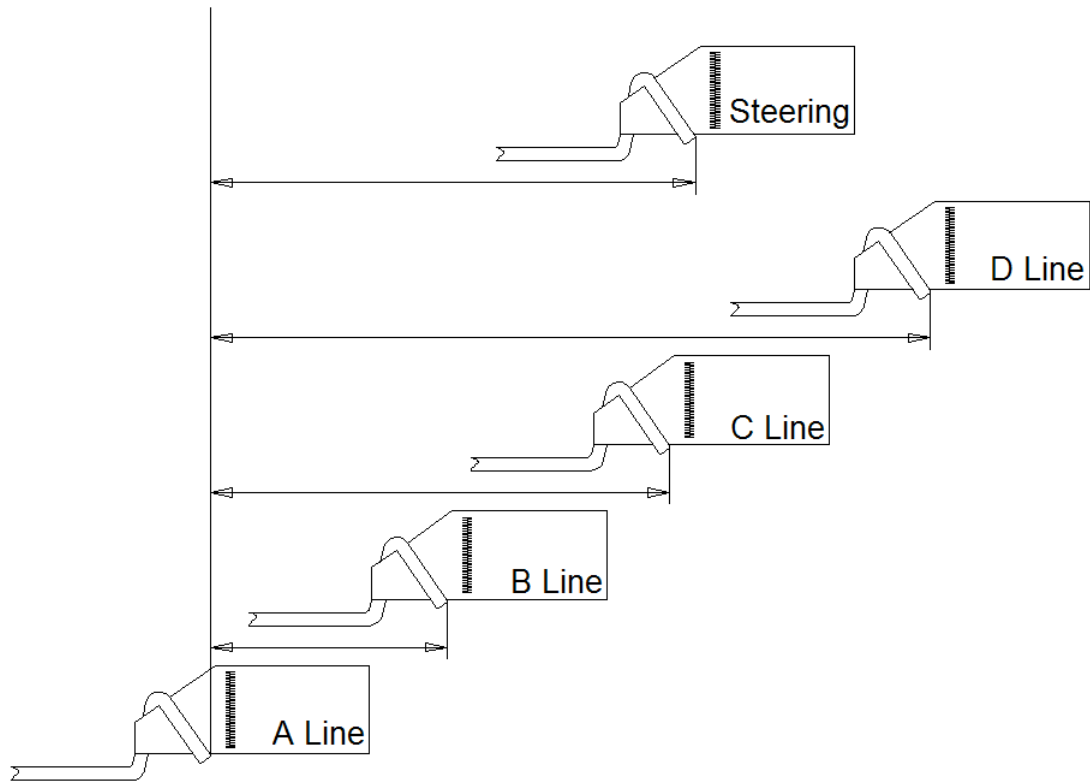

<b>OSP 185</b>	<b>B = A + 6</b>	<b>C = A + 22</b>	<b>D = A + 45</b>	<b>SL = A + 38</b>
<b>OSP 205</b>	<b>B = A + 8</b>	<b>C = A + 25</b>	<b>D = A + 48</b>	<b>SL = A + 41</b>
<b>OSP 225</b>	<b>B = A + 8</b>	<b>C = A + 26</b>	<b>D = A + 52</b>	<b>SL = A + 44</b>
<b>OSP 245</b>	<b>B = A + 8</b>	<b>C = A + 27</b>	<b>D = A + 53</b>	<b>SL = A + 45</b>
<b>OSP 265</b>	<b>B = A + 8</b>	<b>C = A + 27</b>	<b>D = A + 54</b>	<b>SL = A + 45</b>
<b>OSP 285</b>	<b>B = A + 9</b>	<b>C = A + 30</b>	<b>D = A + 59</b>	<b>SL = A + 50</b>
<b>OSP 305</b>	<b>B = A + 10</b>	<b>C = A + 31</b>	<b>D = A + 61</b>	<b>SL = A + 51</b>

**Measurements are in Centimeters!**

The stabilizer slack is 1cm on B line, 2cm on C line and 3cm on D line.

Slack on mini stabilizers is 1cm.

Regards,  
 Andrej Krajnc  
 ATAIR D.O.O.  
[www.basetroll.com](http://www.basetroll.com)

