

MOJO ASSEMBLY

1. Install the RSL stiffener in the pockets (**Fig 1**) and the lanyard tab in its pocket (**Fig 2**). Install the ripcord, ensuring the RSL ring is between the two ripcord guide rings (**Fig 3**). Ensure that the the colored tabs on the lanyard match the pocket and tab on the rig (all are yellow in these instructions). If the colors are not the same, stop the installation and contact Rigging Innovations.



Figure 1.



Figure 2.



Figure 3.

4. After the packed freebag is temp-pinned into the reserve container, fold the bridle back towards the bag and make a 90 degree fold to the WEARER'S RIGHT SIDE. (Figure 4)

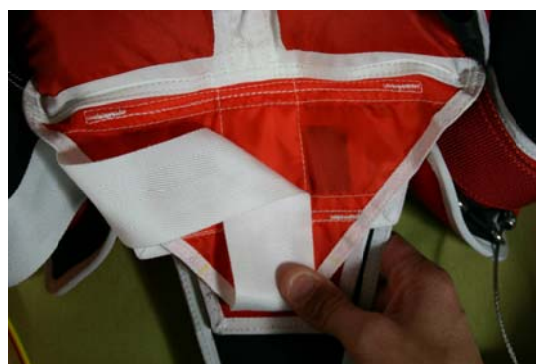


Figure 4.

MOJO ASSEMBLY

5. "S" fold the bridle to the width of the bag yoke until the MOJO release is even with the side of the bag AND FACING UP. (Figure 5)



Figure 5.



Figure 6.

6. Fold the top section of the yoke back over the bridle stack. (Figure 6)

7. Fold the bridle stack and yoke onto the ears of the bag. The MOJO release will be UPSIDE DOWN and aligned with the side of the bag. The MOJO assembly label will be exposed. (Figure 7)



Figure 7.



Figure 8.

8. "S" fold all but the last 6-12" (150-300mm) of the upper bridle to the length of the MOJO release. (Figure 8)

MOJO ASSEMBLY

9. Flip the bridle stack over so the release is facing UP. (Figure 9)

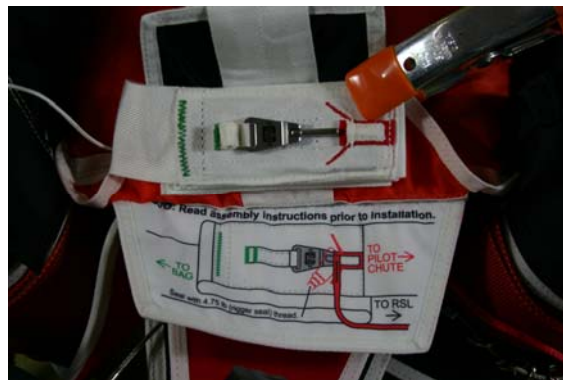


Figure 9.



Figure 10.

10. Insert 4.75-lb seal thread into the red tacking anchor. (Figure 10)

11. Insert the MOJO pin through the loop in the end of the red MOJO RSL lanyard. Push the pin as far as possible into the white pin sleeve.

Tie the seal thread snugly between the red lanyard and the top of the triangular MOJO base piece.

Use a standard surgeon's knot and locking knot. (Figure 11)

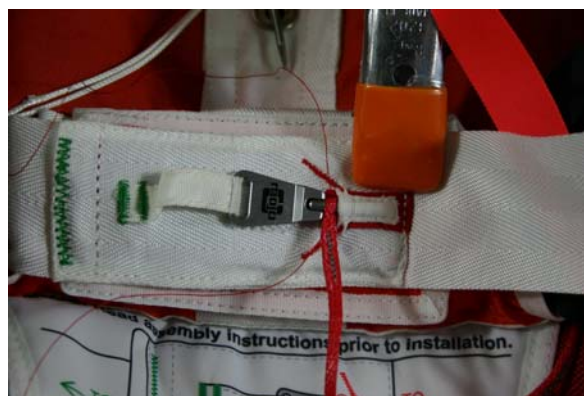


Figure 11.

MOJO ASSEMBLY

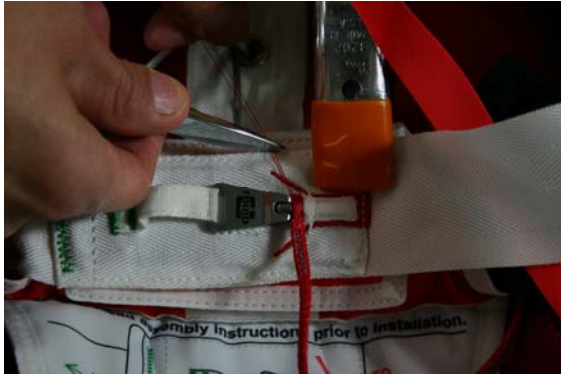


Figure 12.

12. Trim the thread ends, leaving 1" tails.
(Figure 12)

13. Route the red lanyard out the wearer's left side, then fold the bridle and small flap toward the instruction label. Leave the bridle routed toward the bottom of the container. (Figure 13)



Figure 13.



Figure 14.

14. Fold the big flap (the flap with the instructions) over the small flap. (Figure 14)

15. Tuck the remaining 6-12" (150-300mm) of bridle under the stack so that just the attachment point of the bridle/PC is exposed. Secure with a clamp. (Figure 15)



Figure 15.

MOJO ASSEMBLY

16. Collapse the pilot chute and close the container according to the Curv owner's manual. Excess lanyard should be tucked between the freebagbag and the pack tray after side flaps are closed and the "paddle pockets" are tucked in.

(Figure 16)



Figure 16.

----- END -----