FIREBIRD EVO
Cutaway cables setup

Our FIREBIRD EVO comes with the yellow Lolon cutaway cables **uncut**.
To size them correctly, please make sure the risers are attached to the 3-ring system of the EVO prior to cutting.
First cut RSL side: Put tension on the riser and **push Lolon cable all the way in towards the handle to account for the stretch of the housing**.
cut cable at height of the apex of the riser safety housing.
Then do the NON RSL side: This cable side will be cut 2.5 cm (1”) shorter, below the housing apex line.

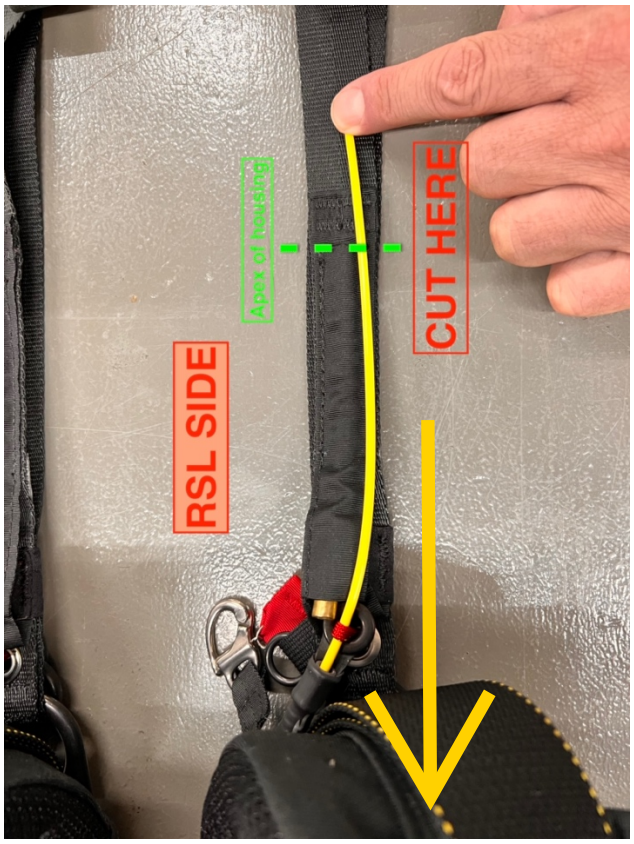

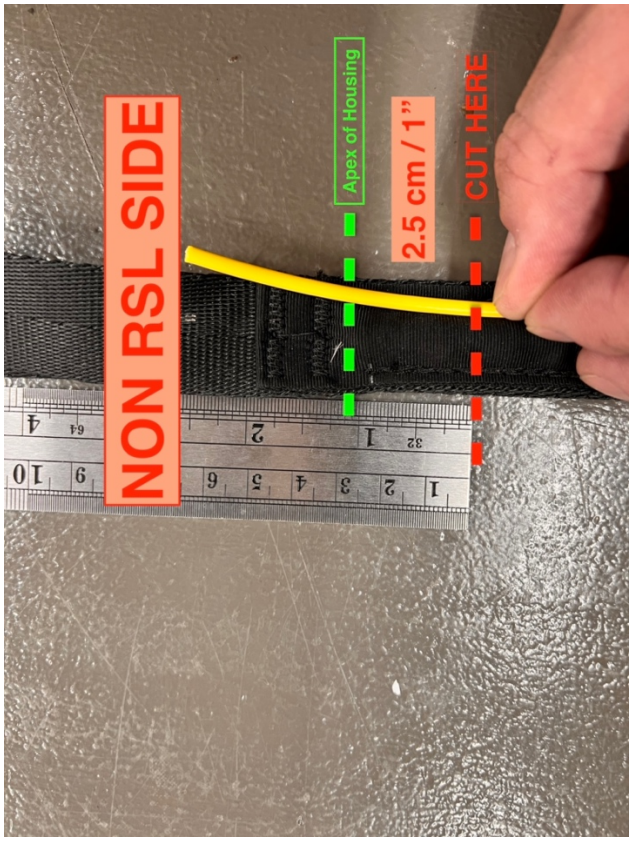

PUSH LOLON CABLE ALL THE WAY IN

FIREBIRD USA LLC
Office +1 747 300 8808
Email : usa@flyfirebird.com
1405 Fligh Line Blvd
DeLand FL 32724
USA
usa@flyfirebird.com